TAITO

TAITRONICS

TIME TUNNEL™

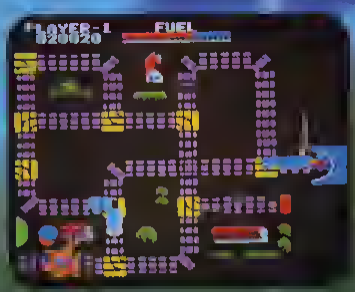

TIME TUNNEL™

- Insert coin(s) and push 1 or 2 player button.
- Move the steam engine forward by pulling the joystick up, and backwards by pushing down. (No points earned for travelling backwards.)
- You can switch the direction of the tracks by pushing the button. The tracks will be switched only when the train is approaching.
- Following the prologue is the rural scene. Maneuver the steam engine through the series of railroad tracks and connect the 3 randomly-located passenger cars and enter the time tunnel.
- Refuel your steam engine by passing the refueling stations. Running out of fuel will cause you to lose a steam engine.
- Do not run into cows on the track and avoid contact with the opposing train and aliens or you will lose a steam engine.
- If fuel is left when completing a scene, 50 points per increment remaining will be added to your score.
- In the second scene (the city scene), stop at the different train stations and pick up all 9 passengers. When the train is loaded with passengers enter the time tunnel.
- In the third scene, locate the spaceship that occasionally stops at the different space stations. Bring your train there and unload the passengers when the spaceship has stopped at a station.
- After successfully loaving off the passengers you will return to the first scene where the action is speeded up.
- SPECIFICATIONS:

Table Type	Upright Type
High . . . . . 24 ~ 28 inches (600mm ~ 700mm)	Hight . . . . . 68 inches (1710mm)
Width . . . . . 34 inches (860mm)	Width . . . . 24 inches (610mm)
Depth . . . . . 22 inches (560mm)	Depth . . . . 29 inches (740mm)
Weight. . . . . 127 lbs (58kg)	Weight. . . . 205 lbs (93kg)
Power 100W	Power 100W

- TIME TUNNEL IS AVAILABLE IN UPRIGHT AND TABLE MODELS.

TAITO TAITRONICS

Manufactured by,
TAITO CORPORATION
Mailing address: Central P.O. Box 1104
Tokyo 100-91 Japan
Telex J22931 EPTRA
Cable Address EPTRA TOKYO